

## LIMITED MANUFACTURERS WARRANTY

Crosley Radio, Inc. warrants the product to be free from defects in material and workmanship under normal use for a period of one year from the original date of purchase. This warranty is not transferable. If the product is determined to be defective during the warranty period, the unit will be repaired or replaced at Crosley Radio's sole discretion. This warranty covers manufacturing defects and normal consumer use and does NOT cover damage or failure as a result of abuse, accident, alterations, misuse, neglect, abnormal wear and tear, inadequate maintenance, commercial or unreasonable use, damage caused by power surges, mishandling, accident, acts of God or attempted repair by an unauthorized service agent. Also not covered are cosmetic damages, cords and antennas.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store or retailer where it was originally purchased. If additional service is still needed, the original purchaser must **FIRST** contact our offices to obtain an RA (Return Authorization) Number.

TO OBTAIN AN RA NUMBER  
CALL: **1.888.CROSLEY**  
(1.888.276.7539)

Send the unit prepaid to the address below in the original packaging (or reasonable substitute to prevent damage). Clearly mark your RA number on the outside packaging and include the original sales receipt (or a copy) indicating date of purchase, amount paid, and place of purchase. You must also include your full name, shipping address and daytime contact number. Please include a check or money order in the amount of \$19.95, made payable to Crosley Radio, to cover handling and return shipping charges. Returned products will not be shipped to PO Boxes. Crosley Radio will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information.

**CROSLEY RADIO**  
ATTN: RETURNS DEPT  
2001 PRODUCTION DRIVE  
Louisville, KY 40299

**For additional support:** Crosley Radio Consumer Service Department  
24 hours a day / 7 days a week  
Telephone: 1.888.CROSLEY (1.888.276.7539)

*There are no express warranties except as listed above.  
The purchaser's bill of sale is the only proof of warranty entitlement.*

 
*This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.*

*In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Radio's high standards of quality and workmanship.*

# CROSLEY

# CR1702A

## iJuke Premier

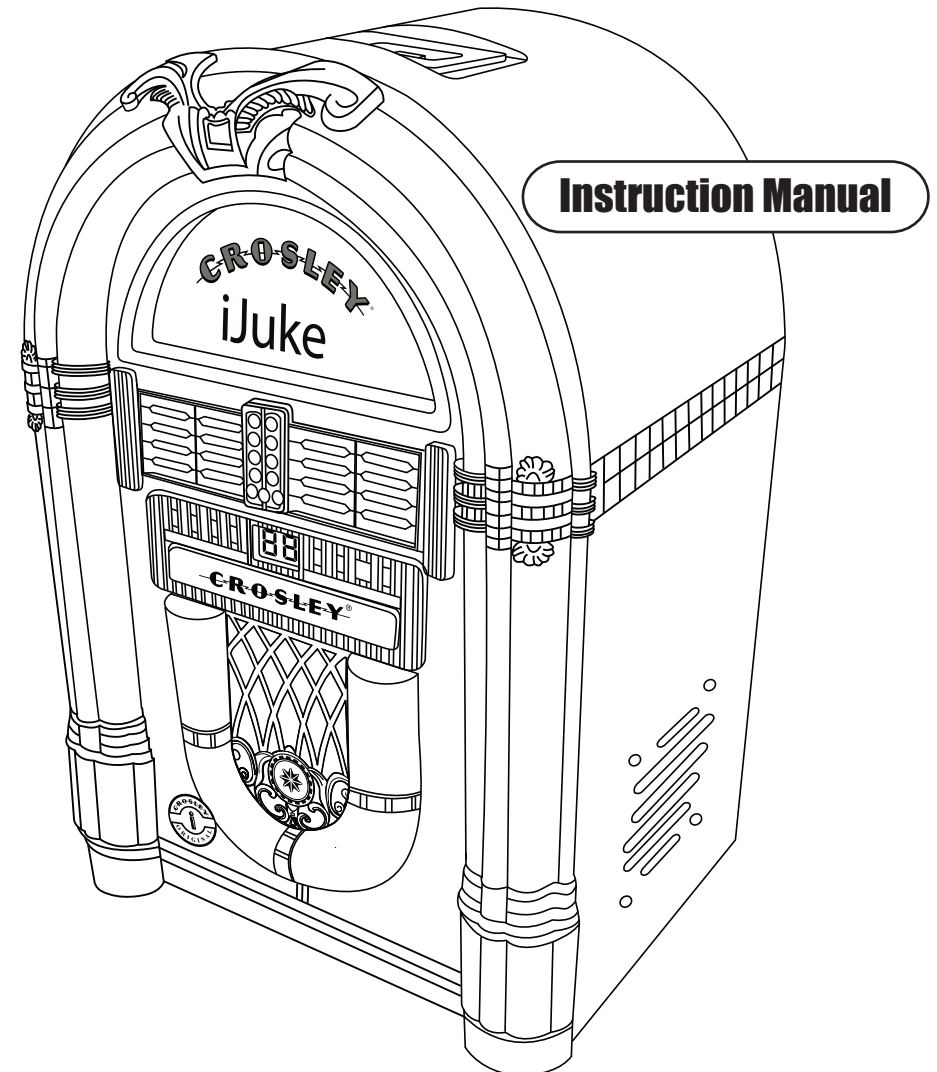

[www.crosleyradio.com](http://www.crosleyradio.com)

# CD Operation

## CD Player

- 1 Make sure the power is on.
- 2 Press CD / iPod BUTTON (22). The CD display (- -) will flash, then show (0 0) .
- 3 Press OPEN / CLOSE BUTTON (24) to open CD DRAWER (11) .
- 4 Insert CD in tray with the label side of CD facing up.
- 5 Press the OPEN / CLOSE BUTTON (24) again to close the CD DRAWER (11).
- 6 Press PLAY / PAUSE BUTTON (23) to begin playing the CD.
- 7 To stop playing, press the STOP BUTTON (19).
- 8 To skip to a different track, press the BACK SKIP (18) or the FORWARD SKIP (26) button.
- 9 By pressing and holding either the BACK SKIP (18) or FORWARD SKIP BUTTON (26), you can rewind or fast forward through each individual tack. The track will fast forward or rewind as long as you are holding the button. Once you let off the button, regular playback resumes.
- 10 During playback, you can use the repeat function to repeat a single song or the whole CD.
- 11 While the song you want to repeat is playing, press the REPEAT (20) button once. You will see the REPEAT INDICATOR (5) on the jukebox start to flash. The song will start over once it is finished.
- 12 Press the REPEAT (20) button a second time to repeat the whole CD. The REPEAT INDICATOR (5) will stay on without flashing.
- 13 Pressing the REPEAT (20) button a third time will disable the repeat function.

## Programmed CD Playback

This CD player is programmable which allows you to program it to play only selected tracks. To program, follow the steps below.

- 1 Insert disc and close CD DRAWER (11). Do not press play yet.
- 2 Press the PROGRAM (21) button. The PROGRAM INDICATOR (4) on the jukebox will start to flash.
- 3 Use the BACK SKIP (18) or FORWARD SKIP BUTTON (26) to select a track you want to program.
- 4 Once you have selected a track, press the program button again. This stores the track into memory.
- 5 Use the BACK SKIP (18) or FORWARD SKIP BUTTON (26) to select the next track you want to program. Once selected, press the program button again.
- 6 Repeat step number 5 until you have programmed all desired tracks.
- 7 Press PLAY / PAUSE BUTTON (23) to begin playing the selected tracks. The program light will stop flashing and the selected tracks will begin playing. They will play in the order that they were programmed.
- 8 Using the BACK SKIP (18) or FORWARD SKIP BUTTON (26) will only skip through the programmed tracks.
- 9 To clear programmed tracks, press the stop button twice until the program light goes out.
- 10 Programmed tracks will also be erased from memory when the CD DRAWER (11) is opened or when the power is turned off.

## WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. PILOT LAMPS SOLDERED IN PLACE. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lighting flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.

 
### CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER - SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

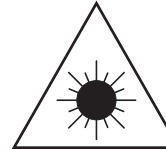

### CAUTION

For Compact Disc Units Only:

**INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED. AVOID DIRECT EXPOSURE TO LASER BEAM.**

## Specification

Power Source	: AC 120V ~ 60Hz
Power Consumption	: 30W
Speaker	: 4" Dynamic Type x 2
Speaker Wattage	: 5 W
Speaker Ohm	: 4 Ohm
Output Wattage	: 2W per channel

\* DESIGN AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

## Basic Operation

### Lights

- 1 Gently pull on top right side of tuner door to open.
- 2 Press light button in to turn lights on.

### Remote Control

- 1 Press the Power (17) button to turn the power ON/OFF.
- 2 Press CD/iPod (22) to select CD player or iPod mode.
- 3 Use VOL+ (27) and VOL- (28) to adjust the volume level.
- 4 Press the MUTE (25) button to mute the volume completely.
- 5 The remaining controls are specific to the CD player. See CD OPERATION for information on CD player.

## Connecting Optional Equipment

 
### External Speakers

- 1 This unit is equipped with external speaker outputs.
- 2 The speaker jacks for external speakers are located on the back of the unit. Beside the speaker jacks is a switch labeled (int./ext.) When using external speakers, this switch must be switched to the ext. position. Doing this turns off the internal speakers in the unit and redirects to power to the external speakers.
- 3 If you decide not to use the external speakers, be sure the switch is on int. or the internal speakers will not work.

### Unit Controls

- 1 iPod Dock
- 2 Power
- 3 Light On / Off
- 4 Program Indicator
- 5 Repeat Indicator
- 6 Play / Pause Indicator
- 7 Mute Indicator
- 8 Remote Sensor
- 9 Stand By Indicator
- 10 Power Indicator
- 11 CD Drawer
- 12 Remote Holder
- 13 Stage light Stop & Run Switch
- 14 Int./Ext. Speaker Switch
- 15 Speaker Jacks
- 16 A/C Power Cord


## Control Locators

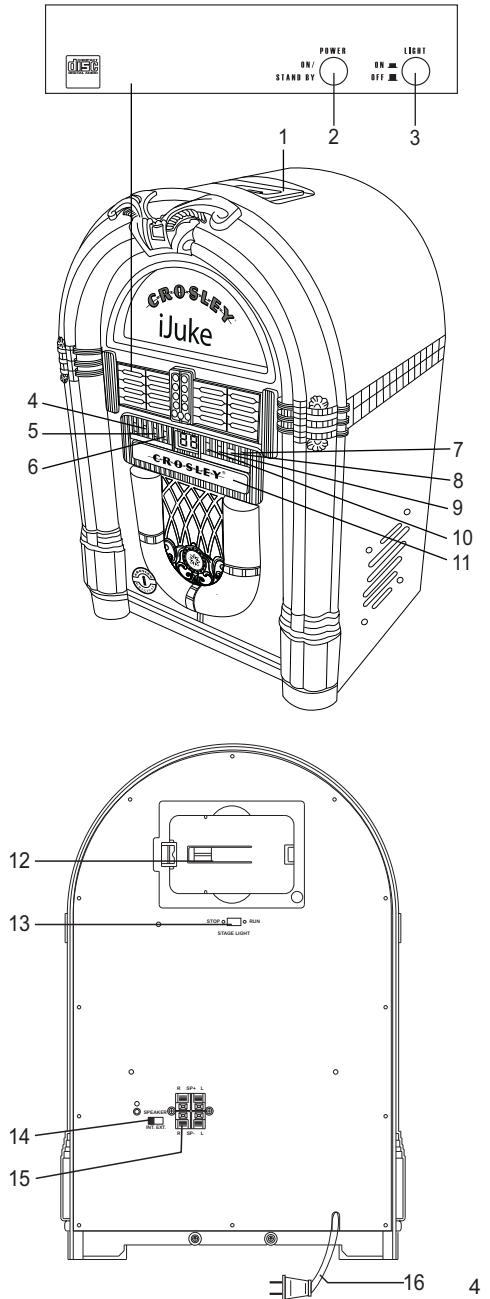

# IMPORTANT SAFETY INSTRUCTION

## PLEASE READ CAREFULLY ALL THE FOLLOWING IMPORTANT SAFEGUARDS THAT ARE APPLICABLE TO YOUR EQUIPMENT

 1. Read Instructions - All the safety and operating instructions should be read before the product is operated.
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the product and in the operating Instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
6. Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
9. Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
10. Power Sources - This product should be operated only from the type of power source indicated on the marking label, if you are not sure of the type of power supply to your home. Consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
11. Grounding or Polarization - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
12. Power - Cord Protection - Power - supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
13. Lightning - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power - line surges.
14. Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
15. Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
16. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short - out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
17. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
18. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions;
  - a. When the power-supply cord or plug is damaged.
  - b. If liquid has been spilled, or objects have fallen into the product.
  - c. If the product has been exposed to rain or water.
  - d. If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e. If the product has been dropped or damaged in any way.
  - f. When the product exhibits a distinct change in performance - this indicates a need for service.
19. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
20. Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
21. Wall or ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
22. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.



**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

## General

### Troubleshooting

#### There's no sound?

- 1 Make sure the mute function is turned off.
- 2 Check that the volume is turned up by pressing vol.+ button on remote.
- 3 Make sure EXT. / INT. switch on back of the unit is on int. (unless you are using external speakers, in which case it should be on ext.)
- 4 Check to make sure power is turned on.

#### CD does not play?

- 1 Check to make sure CD is inserted correctly (label side facing up).
- 2 Check to see that surface of CD is clean.
- 3 Make sure the unit is on CD function by pressing CD / iPod button.

#### Remote not working?

- 1 Replace batteries.
- 2 Be sure and point remote towards remote sensor when using.
- 3 Remove obstacles in the path of the remote and the unit so that remote signal has a straight path to the unit.

# Welcome

Thank you for purchasing the the Crosley iJuke Premier (CR1702A). Before operating this unit, please read this manual thoroughly and retain it for future reference.

# About This Manual

Instructions in this manual describe the control functions of the CR1702A.

# Table of Contents

<b>Getting Started</b>	
Control Locators.....	4,5
Unpacking.....	6
Power Source.....	6
<b>Basic Operation</b>	
Lights .....	7
Remote Control.....	7
External Speakers.....	7
<b>Connecting Optional Equipment</b>	
Using your iJuke.....	8
<b>CD Operation</b>	
CD Player.....	9
Programmed CD Playback.....	9
<b>General</b>	
Troubleshooting Guide.....	10
Warranty.....	11

# Basic Operation

 
## Using Your iJuke

The iJuke features the Universal iPod Dock that uses dock adapters that come with newer iPod models. Before inserting your iPod, you will need to install the correct dock adapter. By using the correct dock adapter, you can insert any iPod with a dock connector. While docked, the iJuke will also charge your iPod. To connect your iPod, follow the steps below.

- 1 Insert the correct dock adapter that fits your iPod. Your iPod should fit snugly into the correct adapter. Gently press the adapter until it snaps firmly in place.
- 2 Connect your iPod as shown in the illustration below.



- 3 Press the Power button to turn iJuke on.
- 4 Push CD / iPod BUTTON (22), to select the iPod function
- 5 Browse your iPod for songs and press the Play/Pause button. Your music should begin to play.
- 6 Adjust the volume to your desired listening level.
- 7 To remove the dock adapter, push your fingernail into the slot in the back of the adapter and lift up.

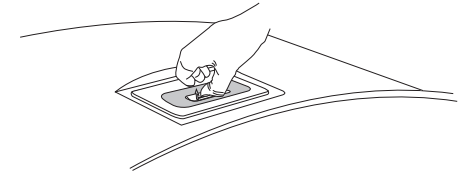


**Note:** When using the jukebox in iPod mode, the remote control will only control the volume and will not control the functions of your iPod.

# Control Locators
 
## Remote Controls

- 17 Power
- 18 Back Skip
- 19 Stop
- 20 Repeat
- 21 Program
- 22 CD / iPod
- 23 Play / Pause
- 24 Open / Close
- 25 Mute
- 26 Forward Skip
- 27 Volume Up
- 28 Volume Down

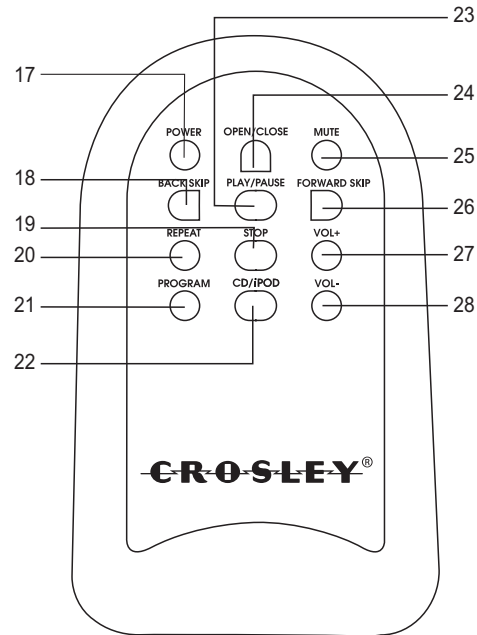

# Getting Started

 
## Unpacking

- 1 Remove styrafoam packing materials.
- 2 Remove plastic bags covering the jukebox and the power cord.
- 3 Untie power cord and remove the plastic safety cover from the plug end.
- 4 Remove remote from its storage and remove the plastic bag covering it.
- 5 Store all packing materials in the box.

Note: Save all packing materials in case the units need to be moved or returned.

## Power Source

- 1 Unwind the AC POWER CORD (16) at the back of the unit and connect it to a power outlet.
- 2 Plug A/C cord into appropriate outlet.

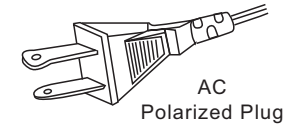

Note: This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other.) This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet try reversing the plug, if the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

- 3 Install 2 AAA batteries (not included) in remote control.
- 4 Plug A/C cord into appropriate outlet.