

## FCC Requirements

1. This equipment complies with 47CFR Part 68 and ACTA technical requirements. On the bottom of this equipment is a label that contains, among other information, the registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.
2. The USOC number of the registration jack for the equipment is RJ11C/RJ11W.
3. A FCC compliant telephone cord and modular plug is provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is TIA/EIA-IS-968 compliant. See Installation Instructions details.
4. The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.
5. If this terminal equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
6. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted services.
7. The equipment cannot be used on public coin phone service provided by the telephone company. Connection to party line service is subject to state tariffs.
8. Please follow instructions for repairing if any (e.g. battery replacement section), otherwise do not alternate or repair any parts of device except specified.
9. This equipment if it uses a telephone handset is hearing aid compatible.
10. If trouble is experienced with this equipment, for repair or warranty information, please contact service center at the below. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

## IMPORTANT SAFETY INSTRUCTIONS


When using your telephone equipment, basic safety precautions, should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
5. Slots and openings in the cabinet and back or bottom are provided for ventilation, to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation.
6. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
7. To reduce the risk of electric shock, do not disassemble this product. Take it to a qualified serviceman when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.
8. Unplug this product from the wall outlet and refer servicing to qualified service personnel in the following cases:
  - A. When the power supply cord or plug is damaged or frayed.
  - B. If liquid has been spilled into the product.
  - C. If the product has been exposed to rain or water.
  - D. If the product does not operate normally by following the operating instructions. Adjust only those controls, that are covered by the operating Instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
  - E. If the product has been dropped or the cabinet has been damaged.
  - F. If the product exhibits a distinct change in performance.
9. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
10. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
11. Avoid using a telephone (other than a cordless type) during an electric storm. There may be a remote risk of electric shock from lightning.
12. Do not use the telephone to report a gas leak in the vicinity of the leak.
13. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

**CROSLLEY**<sup>®</sup>

# CR62

## Kettle Classic Desk Phone

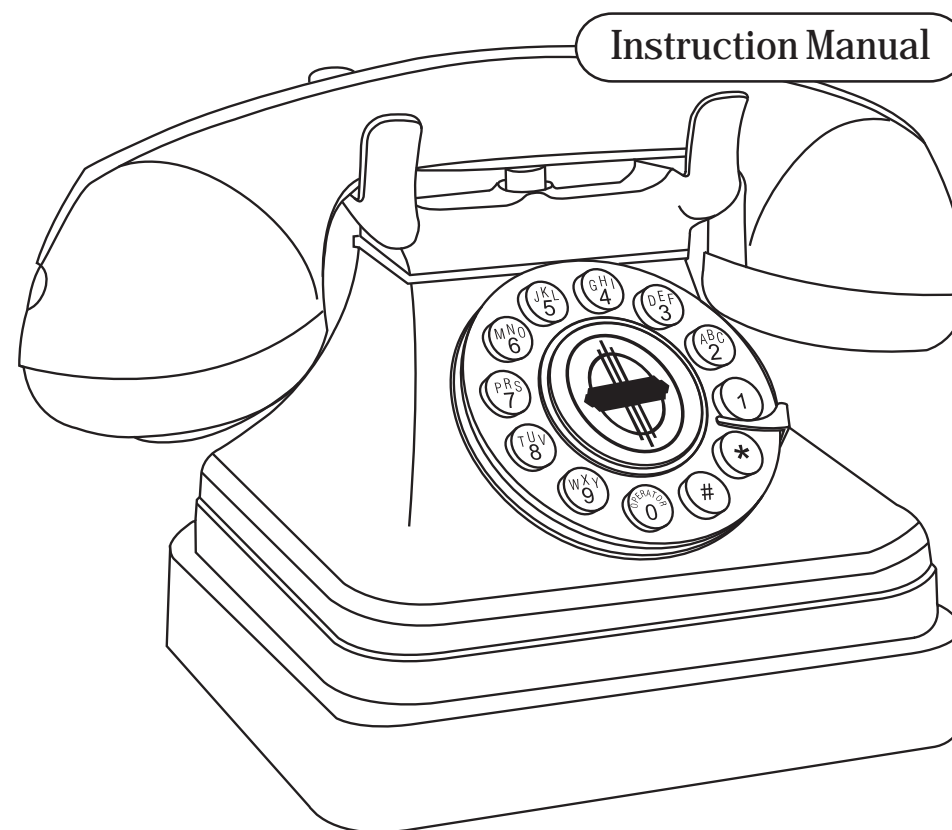

SAVE THESE INSTRUCTIONS

# WARRANTY

Crosley Radio Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale to the original purchaser.

Should the unit fail under normal usage during the 90 day warranty period, a request for RETURN AUTHORIZATION (R.A.) must be made by the original customer before returning the unit. Call Crosley Radio customer service for Return Authorization at (502) 583-4246 from 9 AM to 5 PM (EST) Monday to Friday.

Upon receiving the RETURN AUTHORIZATION number from the Customer Service Department, properly pack your unit in its original packaging. Include any adapters, parts, & accessories which were originally provided with the product, along with a check or money order for \$19.95 made out to Crosley Radio to cover the handling and return postage. Display the R.A. # on the outside of the carton and ship PREPAID via standard UPS or its equivalent.

**CROSLEY  
RADIO**

ATTN: RETURNS DEPT  
2001 PRODUCTION DRIVE  
BAY 2 & 3  
LOUISVILLE, KY 40299

CROSLEY RADIO assumes no responsibility for units sent without prior Return Authorization.

The purchaser's bill of sale is the only proof of warranty entitlement and must accompany the unit.

The warranty does not cover damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Crosley Radio to service the product. This warranty does not cover products sold AS IS or consumables (such as fuses or batteries). This warranty is valid only in the United States.

This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Radio, high standards of Quality and Workmanship.

# SET UP

## DIAL MODE

The DIAL MODE switch is located on the bottom of the telephone. Slide the switch to TONE unless you have Dial-Pulse (Rotary) telephone service in your area, in which case, slide the switch to the PULSE position.

## MECHANICAL BELL RINGER CONTROL

The RINGER CONTROL switch on the bottom of the telephone allows you to turn the ringer ON or OFF. You can still make or receive calls with the ringer in OFF position, however, you will not hear the incoming ring.

## RECEIVER VOLUME

The RECEIVER VOLUME CONTROL switch, located on the bottom of the telephone, allows you to adjust the volume of the receiver earphone from LOW and HI.

## INSTALLATION

To connect the telephone, connect the line cord from the back of the telephone to the wall jack.

## MAKING AND ANSWERING CALLS

To get a dial tone or answer an incoming call, lift the handset. To hang up, either replace the handset or press the HANDSET CRADLE manually.

## FLASH

Pressing FLASH sends the electronic equivalent of a switchhook signal. Use FLASH with special phone company services such as call waiting.

## IF THERE IS NO DIAL TONE

- 1) Make sure that all plugs are connected properly. Check the connections at the wall jack, the telephone cabinet and handset.
- 2) Try another modular jack within your home which you know to be working properly.

## IF CALLS CANNOT BE DIALED OR DIALS SLOWLY

Check to make sure that the DIAL MODE switch is in the correct position for the type of service (TONE/PULSE) available in your area.

## IF THE TELEPHONE DOES NOT RING

Check that RINGER CONTROL switch is not set to OFF. If there are several telephones connected to the same line, try disconnecting some of the other telephones. Having too many telephones connected to the same line can cause low ringer volume or poor sound quality during calls.

## CARE AND MAINTENANCE

Avoid rough treatment to the telephone. Do not drop the handset and always place it gently back in the cradle. Clean only with slightly dampened cloth. Do not use detergent, wax, solvent, spray, alcohol or excessive water.

## PARTS INCLUDED

Your new telephone includes the following items:

- 1 - Telephone handset with handset cord
- 1 - Telephone body
- 1 - Line cord

