

NEEDLE INSTALLATION

PLAYING RECORD:

Remove white plastic needle protector to play your records. To engage the turntable, you must first lift the tone arm and pull to the right until you hear a click.

REMOVING NEEDLE:

1. Gently pull down the tip of the cartridge.
2. Pull cartridge forward.
3. Pull out and remove.



INSTALLING CARTRIDGE:

After following "Removal instructions" above, follow steps 1 to 4.

1. Position red cartridge with diamond stylus facing down.
2. Line up the back of the needle with tone arm (as shown in picture 1 below).
3. Insert the cartridge with its front end at a downward angle (as shown in picture 2 below).
4. Move front end of needle toward tonearm until it snaps into place.



ADDITIONAL INFORMATION:

- The red cartridge has a very small crystal diamond stylus that is barely visible. Take note that the replacement needle you are receiving is the same as the needle already on the tonearm.
- This needle is safe for 33 1/3, 45 & 78 speed records.
- Replacing the needle depends on how often you use your turntable.
- This diamond stylus will provide an average of 1000 hours playing time.
- To order additional needles, please include the following information with a check or money order:
 1. Name and address
 2. When ordering multiple needles, multiply \$14.95 by quantity.
 3. Make payment in the form of check or money order, payable to Modern Marketing Concepts. Send order request to address below. Sorry, NO credit card purchases.

CROSLEY®

Thank you for purchasing Crosley® products and enjoy the music.
1220 East Oak Street • Louisville, Kentucky 40204